

Running a program from a floppy disk on a Commodore 64

1. Insert disk in disk drive as shown.



2. Push drive locking tab down.



3. Turn on the disk drive (on the back) and the Commodore 64 (on the right side).

4. Turn the television to channel 1.

5. Write the following command **LOAD "*", 8** and press [RETURN].

That is: **LOAD [SPACE] [SHIFT+2] [ASTERISK] [SHIFT+2] [COMMA] 8**



6. Once the program has been loaded, the computer writes "READY." Give the command **RUN**, and press [RETURN] to start the loaded program.

If the program does not load, and the disk drive flashes the red light, the disk is not properly inserted, or the drive lock is not in place. Turn the disk drive off and on again, and insert the disk correctly to retry.

Hvordan man kører et program fra en diskette på en Commodore 64

1. Indsæt disketten i diskettestationen som vist.



2. Tryk låseknappen ned.



3. Tænd diskettestationen (på bagsiden), og tænd Commodore 64'eren (på højre side).

4. Tænd fjernsynet på kanal 1.

5. Skriv kommandoen **LOAD "*", 8** og tryk [RETURN].

Dvs.: **LOAD [SPACE] [SHIFT+2] [STJERNE] [SHIFT+2] [KOMMA] 8**



6. Når programmet er indlæst, skriver datamaten "READY.".

7. Skriv kommandoen **RUN**, og tryk [RETURN] for at starte det indlæste program.

Hvis programmet ikke kan indlæses, og det røde lys på diskettestationen blinker, så er enten disketten forkert isat, eller låseknappen er ikke trykket ned. Sluk og tænd for diskettestationen, isæt disketten korrekt, og prøv igen.